

A close-up of a silver Oakley helmet with a large, clear lens. The background is a complex, wireframe-like pattern of concentric lines. The text is arranged in a vertical column on the right side of the helmet.

QUICK START

INICIO RÁPIDO

GUIDE RAPIDE

GUIDA RAPIDA

INÍCIO RÁPIDO

QUICK START ANLEITUNG

GYORSINDÍTÁS

OAKLEY

THE HUMMER 2



WARNING: USE AT YOUR OWN RISK

WARNING: Using headphones while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some states. Check your local laws. Use caution while using your Oakley Thump when you are engaging in ANY activity that requires your full attention. While engaging in any such activity, removal of the speakers from your ear area or turning off your Oakley Thump™ will keep you from being distracted, so as to avoid accident or injury.

Using the headphones at high volume may result in permanent hearing loss. If you experience ringing in your ears, reduce the volume or discontinue using OAKLEY THUMP. With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing. Keep OAKLEY THUMP volume at a safe level.


Using OAKLEY THUMP in or near water or other liquids, or in wet locations, may cause electric shock and serious injury. The frame is not waterproof.

This eyewear is not designed to protect the wearer from all injury in the event of impact with hard objects or if the lens is not properly secured in the frame. Oakley does not recommend the use of tinted lenses for night driving, or direct viewing of the sun or strong artificial light sources. Sunglasses are not recommended for industrial protection.


IMPORTANT: CHARGE THE BATTERY BEFORE USING

The internal battery requires a full 3 hour charge before initial use. With the USB cable, connect OAKLEY THUMP directly to your computer's USB port. OAKLEY THUMP will draw electricity from your computer to charge its internal battery. Please note the following:

- The USB cable plugs into the bottom of OAKLEY THUMP, behind the ear boom on the right side. Be sure the earphone extender is pushed back to expose the Mini-B USB receptacle in the eyewear frame. Release the protective cover from the connection port to plug in the cable.
- When plugging in the USB cable, be sure you have the right cable and the right connection port on your computer. Be sure to align the plug correctly. If the plug will not go in, try flipping it over.

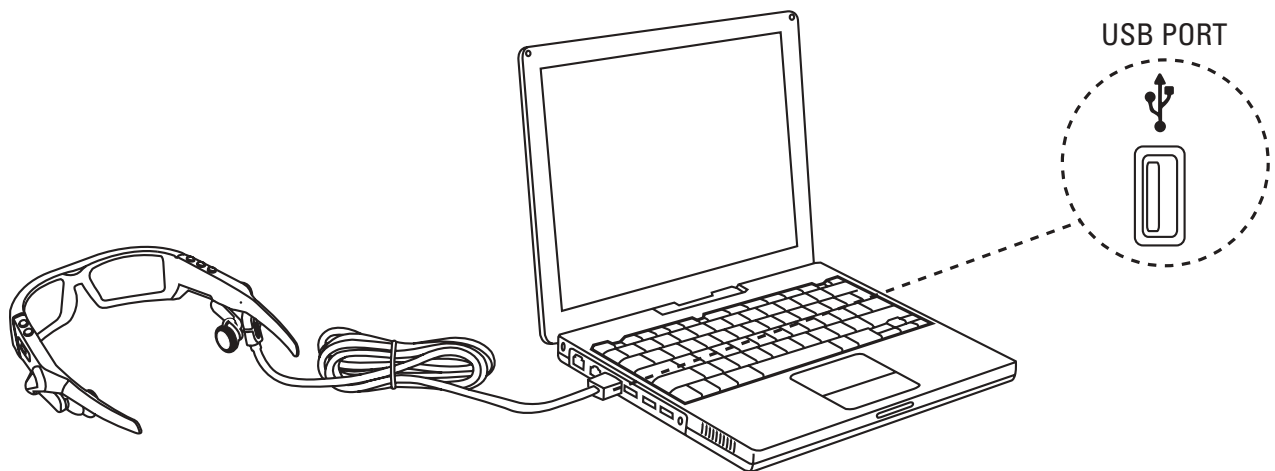

QUICK REFERENCE

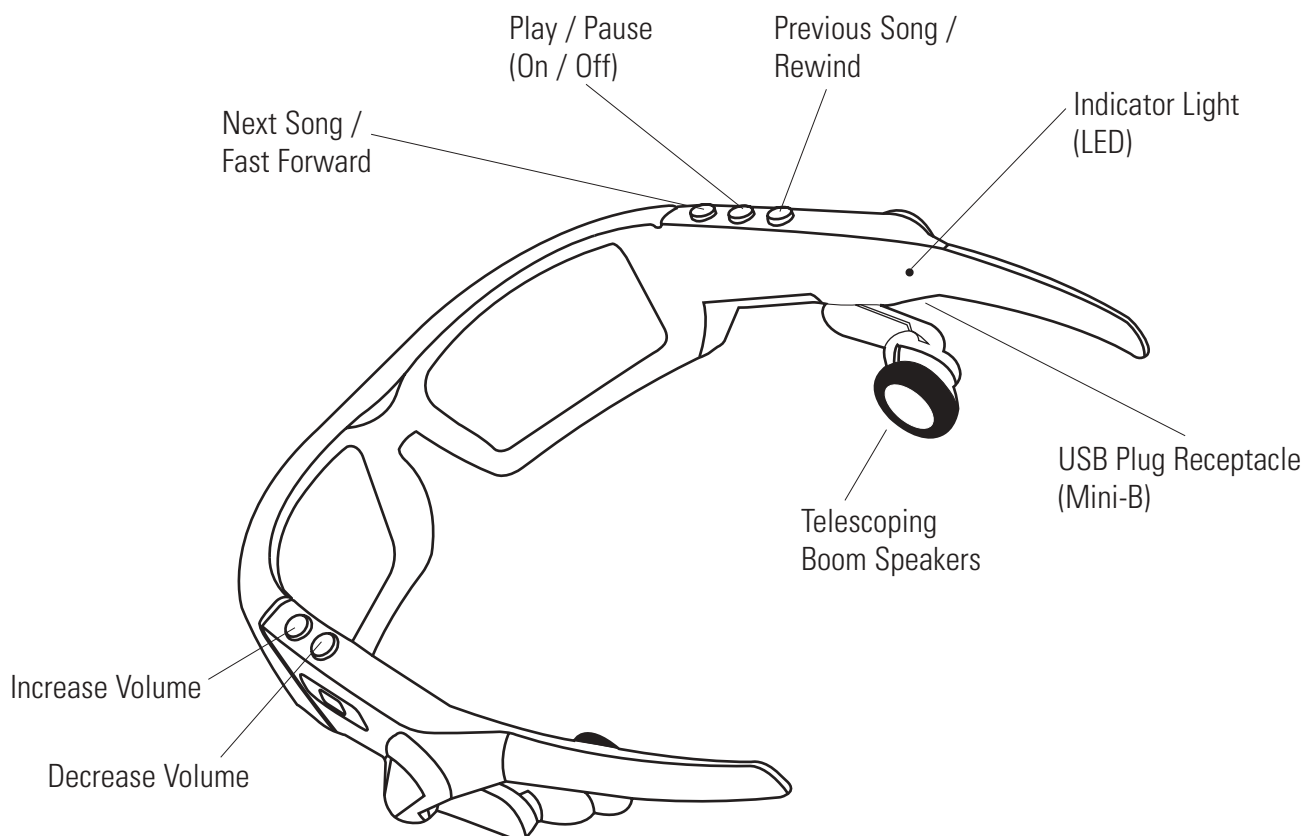

OAKLEY THUMP™ CONTROLS

TURN OAKLEY THUMP ON	Press and hold the <i>Play / Pause</i> button until the power-up tone is heard (OAKLEY THUMP will turn itself on and begin playing the first song)
PAUSE A SONG / RESUME PLAYING	Press the <i>Play / Pause</i> button for less than one second
TURN OAKLEY THUMP OFF	Press and hold the <i>Play / Pause</i> button until the power-down tone is heard (OAKLEY THUMP will turn itself off after three minutes if left in Pause mode)
INCREASE VOLUME LEVEL	Press the <i>Increase Volume</i> button
DECREASE VOLUME LEVEL	Press the <i>Decrease Volume</i> button
SKIP TO NEXT SONG	Press the <i>Next Song / Fast Forward</i> button
TEN SONG SKIP FORWARD	Place THUMP in Pause Mode and then press the <i>Next Song / Fast Forward</i> button
TEN SONG SKIP BACKWARD	Place THUMP in Pause Mode and then press the <i>Previous Song / Rewind</i> button
FAST FORWARD WITHIN A SONG	Press and hold the <i>Next Song / Fast Forward</i> button
PLAY PREVIOUS SONG	Press the <i>Previous Song / Rewind</i> button
REWIND WITHIN A SONG	Press and hold the <i>Previous Song / Rewind</i> button
SHUFFLE MODE	While pressing and holding the <i>Next Song / Fast Forward</i> button, immediately press the <i>Previous Song / Rewind</i> button once.
RESET OAKLEY THUMP (FOR TROUBLESHOOTING)	While pressing and holding the <i>Play / Pause</i> button, press the <i>Previous Song / Rewind</i> button once
EQ SETTINGS	Press the <i>Increase Volume</i> button and the <i>Decrease Volume</i> button at the same time

Note: See the OAKLEY THUMP manual for important instructions on disconnecting OAKLEY THUMP from your computer.

INDICATOR TONES / INDICATOR LIGHT

INDICATOR TONES

- When the *Play/Pause* button is first pressed to start listening to music, a 'THUMP-THUMP' power-up tone is heard.
- When the *Play/Pause* button is pressed and held for three seconds, OAKLEY THUMP turns off and a 'THUMP-THUMP' power-down tone is heard. (OAKLEY THUMP will automatically power down in three minutes after the final song is played, or if left in Pause mode.)
- When the battery is running low (less than 20%), a high-low pitched tone is heard. The tone is heard during initial startup and while music is playing.

INDICATOR LIGHT

When connected to AC or computer:

- The small indicator light on the frame blinks slowly to indicate the link is okay.
- When the battery is charged, the light stops blinking and remains on to indicate a full battery.
- When files are transferred to OAKLEY THUMP, the light blinks rapidly to indicate data is being received.
- The LED will blink 1 of 3 colors, depending on battery level:
 - 100% - Solid Green
 - 67% - 99% - Blinking Green
 - 34% - 66% - Blinking Amber
 - 0% - 33% - Blinking Red

When disconnected from AC or computer:

- When the battery has less than 20% power remaining, the light blinks red to indicate a low battery.